



FLOOR & CARPET SWEEPER

CARE AND USAGE INSTRUCTIONS

ALL MODELS



TO ASSEMBLE HANDLE

Ensure the large diameter section is at the top and the section with the hole is at the bottom. Screw the three sections together tightly before assembly to the sweeper.

TO FIX THE HANDLE TO SWEEPER

Model Evolution 3: Screw the handle into the pivot arm of the sweeper.

Model Handy/ Speedsweep: Depress button (Fig. 2) on the sweeper, slide handle over until the button locates into the hole in the bottom section of the handle.

Fig. 1

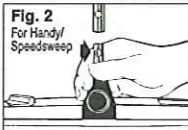 




Fig. 2
For Handy/
Speedsweep



Your Ewbank Sweeper should give years of satisfactory service and any defects due to faulty materials or workmanship will be replaced or serviced. This does not cover defects arising from abuse or normal wear and tear. You should retain your receipt as proof of date of purchase. Your statutory rights are not affected by this guarantee.

As part of our continuous product development programme, Ewbank reserve the right to change the specification described at any time.

  MODEL: HANDY/ SPEEDSWEEP

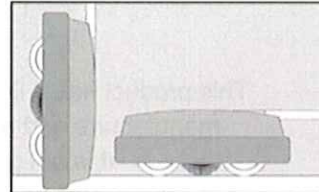
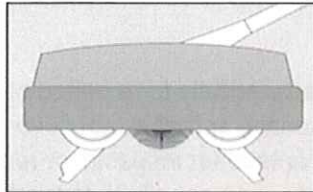


EMPTYING Empty your sweeper regularly to ensure maximum efficiency. To empty, hold pans upright over bin and press edges to open front pan. Tip forwards to empty. Repeat with other pan.

CLEANING The handle will drop into a horizontal position so your sweeper can easily clean under furniture.

TO CLEAN: Comb the brush through occasionally to free fluff and cottons for maximum efficiency. Wipe body case over with a damp cloth.

  MODEL: EVOLUTION 3

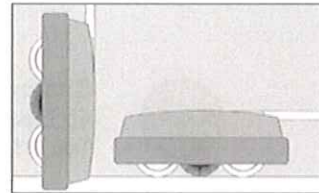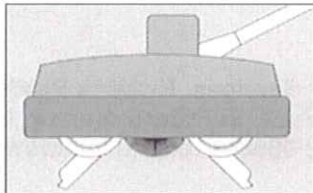

EMPTYING Empty your sweeper regularly to ensure maximum efficiency. To empty, hold over bin, tip front downwards, lift the lever located on the top of the case, empty by tipping dustpan forward. Tip backwards to empty rear dustpan and release lever to close.

CLEANING The handle will drop into a horizontal position so your sweeper can easily clean under furniture.

TO CLEAN: Comb the brush through occasionally to free fluff and cottons for maximum efficiency. Wipe body case over with a damp cloth.



Enquiries to: Customer Services, Ewbank Products Ltd.,
4b Opus Park, Guildford, Surrey, GU1 1SZ, UK.
Tel: 01282 835841 email: info@ewbank.co.uk



Enquiries to: Customer Services, Earlex Inc, 8261 Hyw 73,
Suite F, Stanley, N.C 28164.
Toll-free: 888-783-2612 email: cs@earlex.com



FLOOR & CARPET SWEEPER

YOUR WARRANTY

This product has a limited warranty for a period of 12 months against faulty manufacture and materials, and does not cover normal wear and tear.

It is not guaranteed for industrial or rental purposes.

This warranty does not affect your statutory rights.

Ewbank Products Ltd and Earlex Inc. accept no responsibility for the use of this product if it is used for any purposes other than those detailed in the instruction manual.

After 30 days since purchase and in the event of a warranty claim,
please do not return this product to the store.

Please retain your receipt for warranty purposes.

If you discover you have a part missing, or you experience
difficulty with your product, please contact:



**Customer Services, Ewbank Products Ltd,
4b Opus Park, Guildford, Surrey, GU1 1SZ, UK.
Tel: 01282 835841 email: info@ewbank.co.uk**



**Customer Services, Earlex Inc, 8261 Hyw 73,
Suite F, Stanley, N.C 28164.
Toll-free: 888-783-2612 email: cs@earlex.com**