

Cascade

Model 280



Care and Use Instructions

 
Earlex Inc.

8261 Highway 73, Suite F,

Stanley, N.C. 28164, USA

Earlex Inc, Toll Free 888-783-2612

Email: questions@earlex.com **Website:** www.earlex.com





Cascade

Manual Carpet Shampooer

The Cascade is intended for the domestic market. It is designed to be used on carpets & rugs. Best results will be obtained by reading the following instructions carefully.

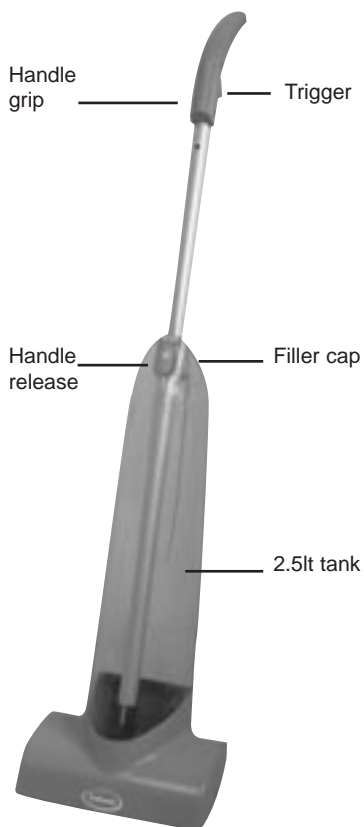 


Fig. 1

Before use

Vacuum the carpet to remove surface debris before applying the foam shampoo.

It is advisable to test the carpet for colour fastness prior to use. To do this, mix a little of the foam shampoo and water to the specified dilution, apply to a clean cloth and then clean a small area of carpet, ideally one which is normally hidden from view.

Shampoo

For best results the shampoo should be mixed: 10 part water to 1 part shampoo
i.e. 10 cups of water to 1 cup of shampoo, or you can use the filling marks on the rear of tank produces the same results (10 to 1 mix).

How to use your Ewbank *Cascade*



How to fill

Turn the filler cap at the top of the tank 1/4 turn to the right and remove. (Fig.2)



Markings on tank

 
Add water to the water level marked on the tank then add shampoo to the shampoo level (Fig.3) for cleaning large areas

Replace the filler cap and turn 1/4 turn to the left.
If spot cleaning, mix shampoo and water at a 10 oz water to 1 oz shampoo.



Press the handle release

Press down on the top of the handle release button then extend the handle by gently pulling upwards until handle locks in place. (Fig.4)

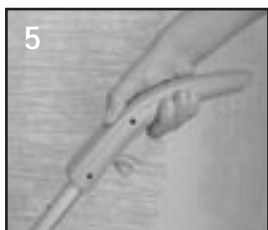

Using the trigger

 
When the handle is locked in positions you will feel a spring loaded action in the trigger. (Fig.5)



Cleaning


Squeezing the trigger will release the valve in the head of the unit allowing the shampoo and water mixture to be applied to the foam roller. Using short overlapping strokes the mixture will be applied to the carpet or rug – **DO NOT OVERWET** the cleaning area. (Fig.6). Releasing the trigger will stop the flow of shampoo/water mixture. After use let the carpet or rug dry completely, then vacuum or use your carpet sweeper to remove the deposits lifted by the foam shampoo.

Note: the drying of the carpet takes generally 3-4 hours.




How to clean your Ewbank Cascade

 After use pour out any unused solution and clean by rinsing out the tank with a small amount of clean water. Pull up on the trigger a number of times to run the clean water through the system. Clean the head by rinsing the roller and brushes under a tap. The shampooer must be thoroughly clean and dry before storing.

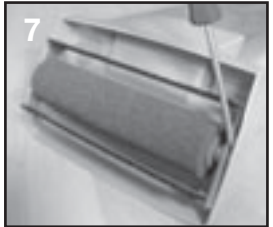

Removing roller

 If necessary you can remove the roller and brush head assembly for cleaning. Do this by inserting a flat head screw driver between the main moulding and brush the rocker arm and gently levering out (Fig. 7)

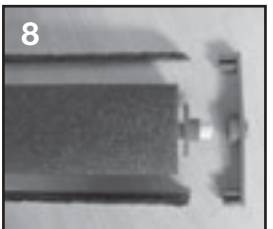

Assembling the head

Assemble the roller and brush head as shown in fig 8.

You may be able to purchase additional shampoo from the company you purchased the product from or if they do not stock these items you can contact our customer service department.

Your Guarantee

This product is covered by a 12 month guarantee.
This does not cover normal wear and tear or abuse.
For guarantee purposes, please retain your original receipt as proof of purchase.

For spares, service and further information please contact;

Earlex Inc.
8261 Highway 73, Suite F,
Stanley, N.C. 28164, USA
Earlex Inc, Toll Free 888-783-2612

Email: questions@earlex.com **Website:** www.earlex.com

